



Computing Services Centre
香港城市大學
City University of Hong Kong

USER GUIDE FOR **USING AV EQUIPMENT**

Run Run Shaw Creative Media Centre

3/F Lecture Theatre M3017

For IT or AV support, please contact the CSC Service Desk at **3442-8340**


AV Control Panel

Display Source Select

1. Desktop computer
2. HDMI1 Input (Use HDMI devices)
3. HDMI2 Input (Use HDMI devices)
4. USB-C Input (Use USB-C devices)
5. Presentation for Visualizer

Other Control


6. Surround Speaker / Speaker Control
7. Gooseneck Mic Control (On/Off)
8. AV AMP Control
9. Left Projector (On/Off)
10. Right Projector (On/Off)
11. Mute Projector
12. System Off
13. Help information

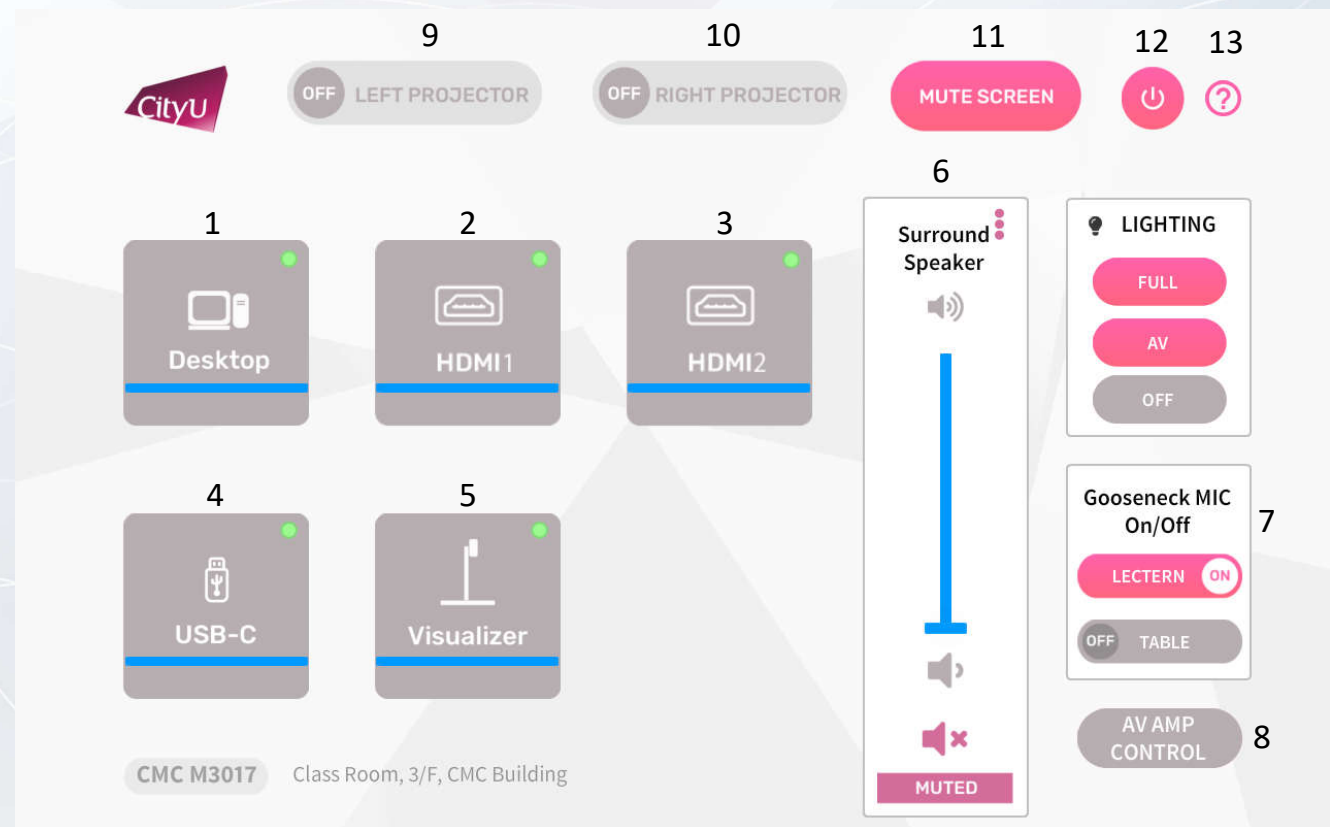

For IT or AV support, please contact the CSC Service Desk at **3442-8340**


Operation procedure of the Desktop Input

1. Press "Desktop " button
2. Select Display Devices (BOTH/ Left Projector / Right Projector)

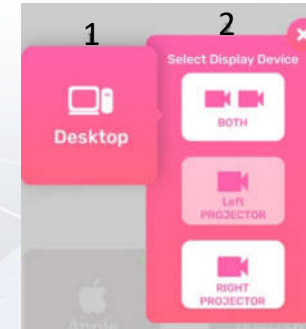


Operation procedure of the HDMI Input

1. Press "HDMI " button
2. Select Display Devices (BOTH/ Left Projector / Right Projector)
3. Connect the HDMI devices using HDMI cable

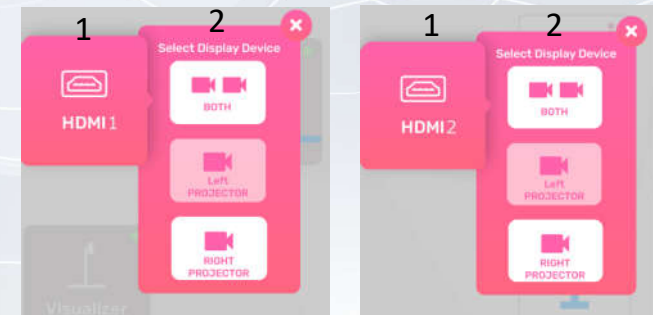


Operation procedure of the USB-C Input

1. Press "USB-C " button
2. Select Display Devices (BOTH/ Left Projector / Right Projector)
3. Connect the USB-C devices using USB-C cable

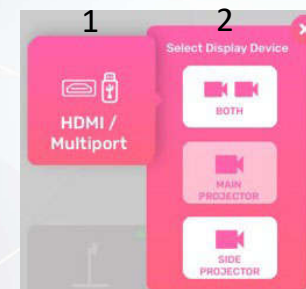

Operation procedure of Visualizer Input

1. Press "Visualizer" button
2. Select Display Devices (BOTH / Left Projector / Right Projector)

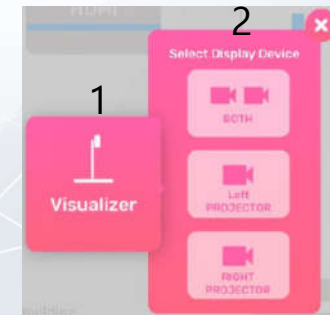

System OFF

1. Confirm Power off
2. Cancel Power off

