



Computing Services Centre  
香港城市大學  
City University of Hong Kong

# USER GUIDE FOR **USING AV EQUIPMENT**

---

Run Run Shaw Creative Media Centre

3/F Shun Hing Lecture Theatre M3090

For IT or AV support, please contact the CSC Service Desk at **3442-8340**


## AV Control Panel

### Display Source Select

1. Desktop Computer
2. HDMI Input (Use HDMI devices)
3. USB-C Input (Use USB-C devices)
4. Presentation for Visualizer

### Other Control

5. Volume Control
6. Lighting Control
7. Gooseneck Mic Control (On/Off)
8. Screen Control
9. Left Projector (On/Off)
10. Right Projector (On/Off)
11. Mute Projector(s)
12. System Off
13. Help information

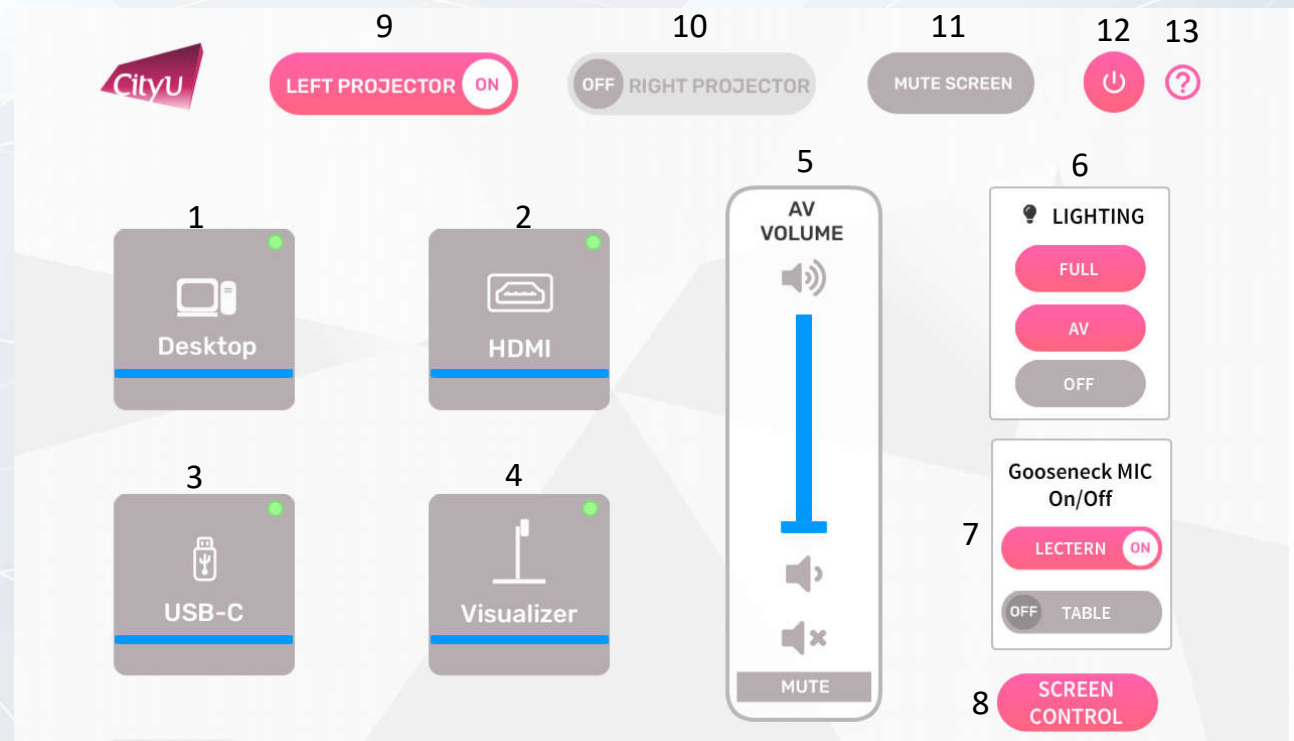

## Operation procedure of the Desktop Input


1. Press "Desktop " button
2. Select Display Devices ( BOTH/ Left Projector / Right Projector)

## Operation procedure of the HDMI Input

1. Press "HDMI " button
2. Select Display Devices ( BOTH/ Left Projector / Right Projector)
3. Connect the HDMI devices using HDMI cable


## Operation procedure of the USB-C Input

1. Press "USB-C " button
2. Select Display Devices ( BOTH/ Left Projector / Right Projector)
3. Connect the USB-C devices using HDMI cable

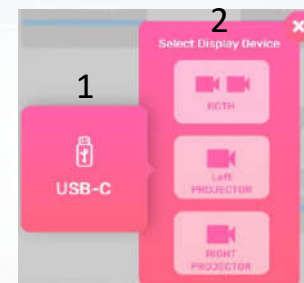

## Operation procedure of Visualizer Input

1. Press "Visualizer" button
2. Select Display Devices (BOTH / Left Projector / Right Projector)

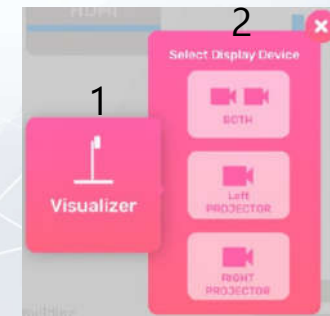

## System OFF

1. Confirm Power off
2. Cancel Power off

